


MUSWAY

MUSIC IS THE WAY

CSB42X

COAXIAL SPEAKERS FOR BMW VEHICLES

SCOPE OF DELIVERY

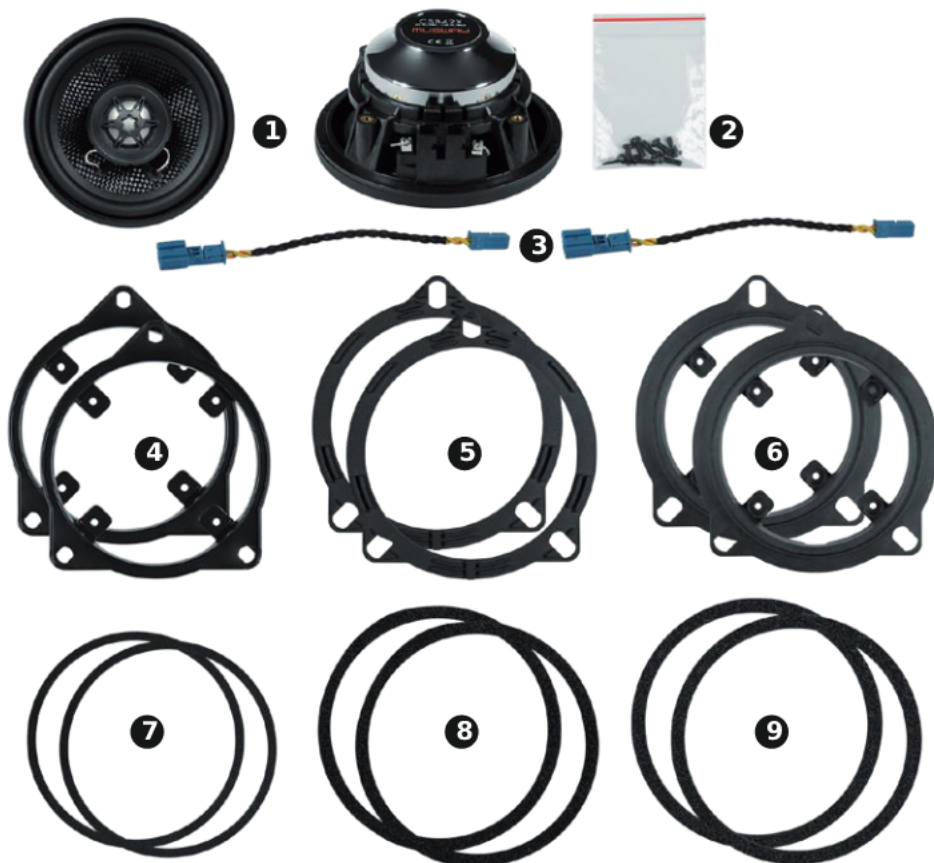

1. Coaxial Speakers CSB42X (2 x)

2. Screw M2,5 x 9 mm (8 x)

3. Vehicle specific connection cable (2 x)

4. Speaker adapter made of sheet metal
(2 x)


5. Speaker rubber gasket (2 x)

7. Foam ring 102 x 93 x 1,5 mm
(2 x)


8. Foam ring 102 x 93 x 4 mm (2

INSTALLATION OPTIONS

The speakers can be installed in these 3 variants according to your vehicle. Make sure which variant is

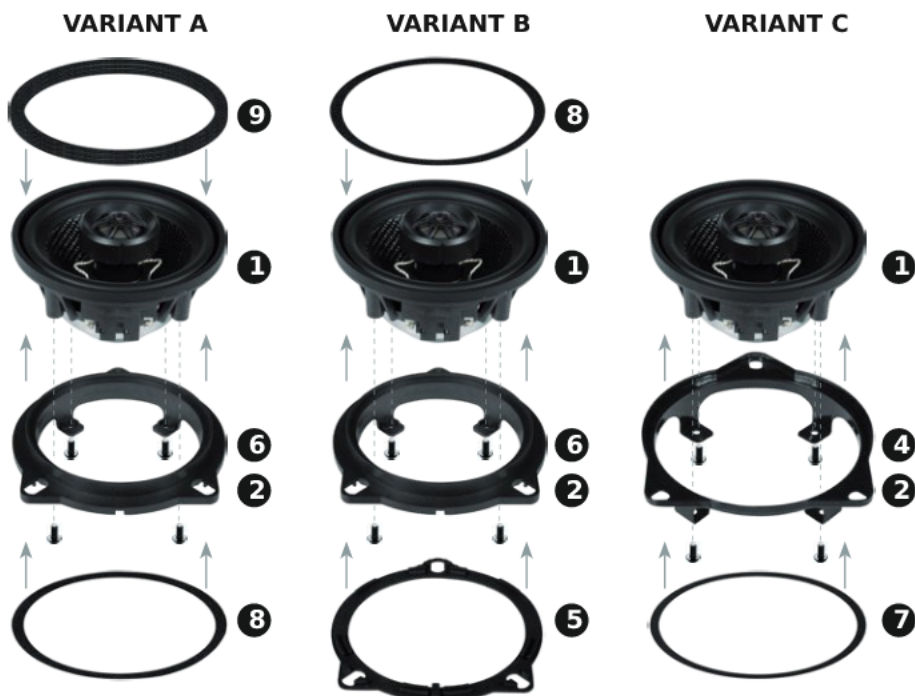

CONNECTION

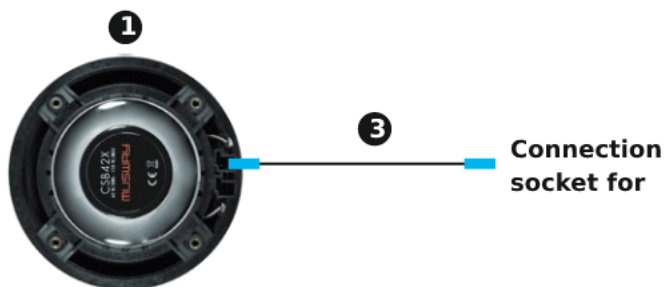

TECHNICAL SPECIFICATIONS

10 cm (4") 2-Way
Coaxial-Speakers
60 Watts/RMS, 120
Watts/MAX
Impedance 4 Ohms
Frequency Response 75 -
22000 Hz
10 cm Woofer
Glass Fiber Cone
Dual Neodymium Magnet

COMPATIBILITY

All BMW E/F/G models
Compatibility depending on model and equipment. No
liability assumed.
State of compatibility: June 2019

IMPORTANT NOTE

This manual is an installation aid for professional installation of the sound system.

Please read the following notes:

- Please handle all parts of the sound system and the components of your vehicle with care.
- Under all circumstances observe the instructions of the vehicle

LEGAL NOTICE

- MUSWAY or Audio Design GmbH are in no way affiliated with Bayerische Motoren Werke (BMW) AG or any of its subsidiaries or affiliates, or acting on their behalf or with their authorization.
- All registered product names and brand names are the property of their

CUSTOMER SERVICE

As a rule, the installation of the sound system must be carried out by a trained and technically skilled specialist. However, if you decide to do it yourself, contact your dealer or the Audio

MOUNTING EXAMPLE BMW Series 5

1. Remove the handle bar



Pry out the handle of the door opener

2. Remove the screws from the handle



Loosen the two exposed screws

3. Dismantling the door panel



Pry the door trim from the door panel




Carefully loosen the clips and trim



Now disconnect all the plugs that are connected to the door trim

4. Disassembly of the speakers

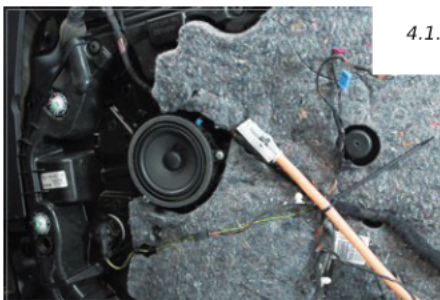

After removing the door panel, the speaker is freely accessible and can now be removed.



5. Mounting the speakers



5.1.

Use the screws to attach the frame to the speaker (included)



5.2.

Attach the supplied rubber ring to the frame



5.3.

Connect the plug to the Musway speaker



5.4.

Now mount the Musway speaker with the screws

6. Mount the door trim in reverse order.

* May vary with specific models or equipment versions. Specifications are without guarantee.

MUSWAY

MUSIC IS THE WAY

MUSWAY
26820 Hobie Cir. Suite A-1
Murrieta, CA 92562 USA
+1 951-816-6307
www.muswayusa.com